
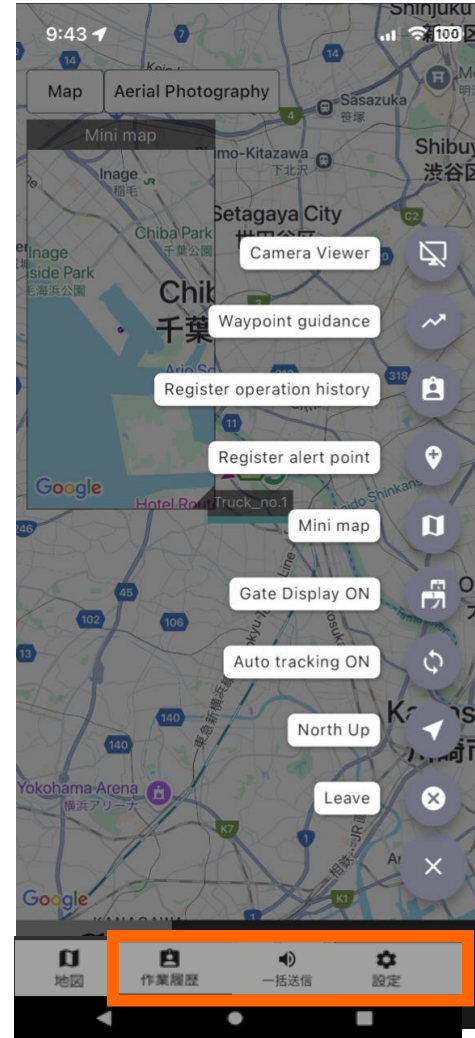


Smart phone Apps

Smart Construction Fleet mobile

Standard mode

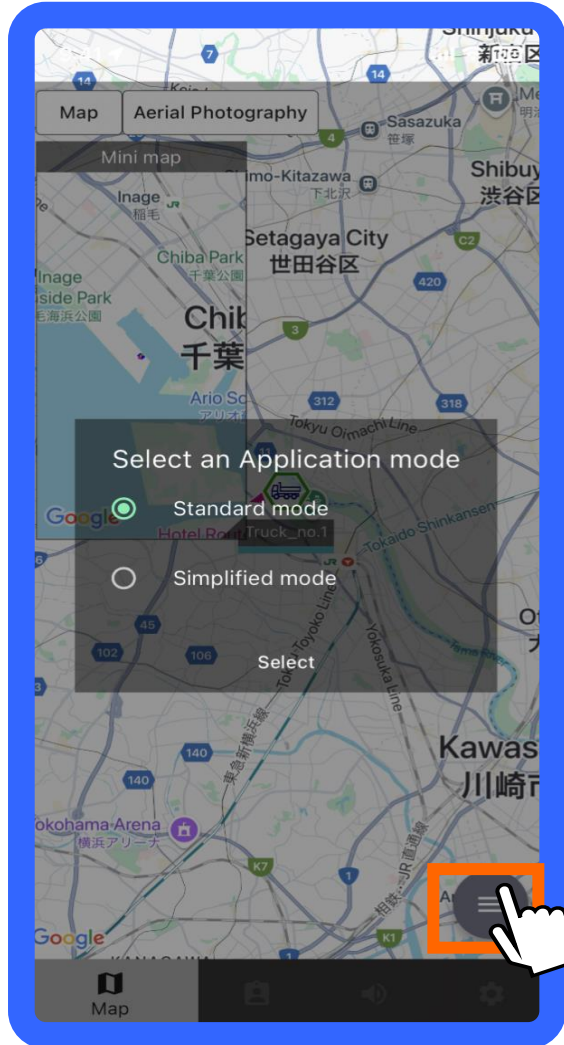

① Camera Viewer Show/Hide

Camera Viewer function allows sharing of images taken by other vehicle.

Advance setting Camera viewer settings ON

② Waypoint guidance

Available certation of the New guided routes from the screen.

③ Operation history

Available registration the loading or unloading (vehicle Roll only)

④ Register alert point

Available registration the alert point.

⑤ Mini map Show/Hide

Available switch the Mini map.

⑥ Gate Display On/Off

Display/Hide of gate mode on the locations.
(alerts and proximity notifications)

⑦ About Tracking ON/OFF

Available display the Track location in the center of the map.

⑧ North up/Heading up

North Up(Always north direction is displayed.)

Heading Up(Direction of travel is displayed.)

Leave button : log out button

(End of location information acquisition.)



Other : History check/Batch sending Setting.

Smart Construction

Smart phone Apps

Smart Construction Fleet mobile

Standard mode



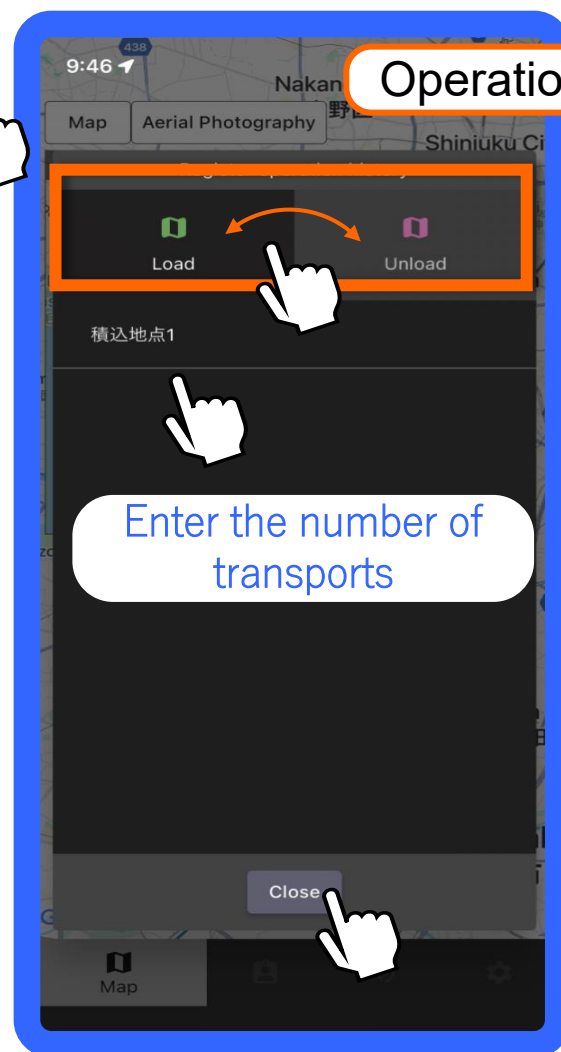
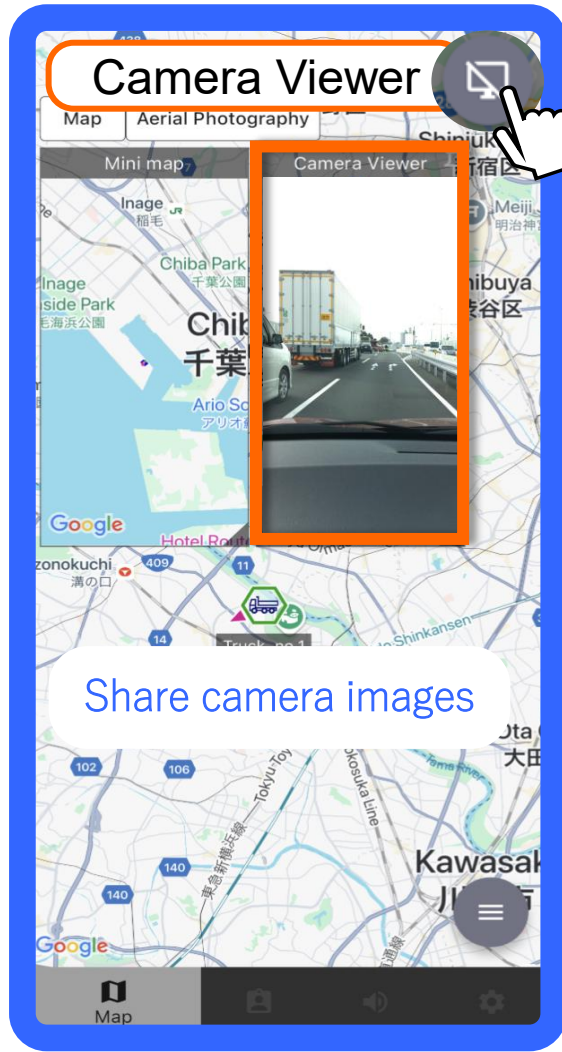


Smart Construction

Smart phone Apps

Smart Construction Fleet mobile

Standard mode

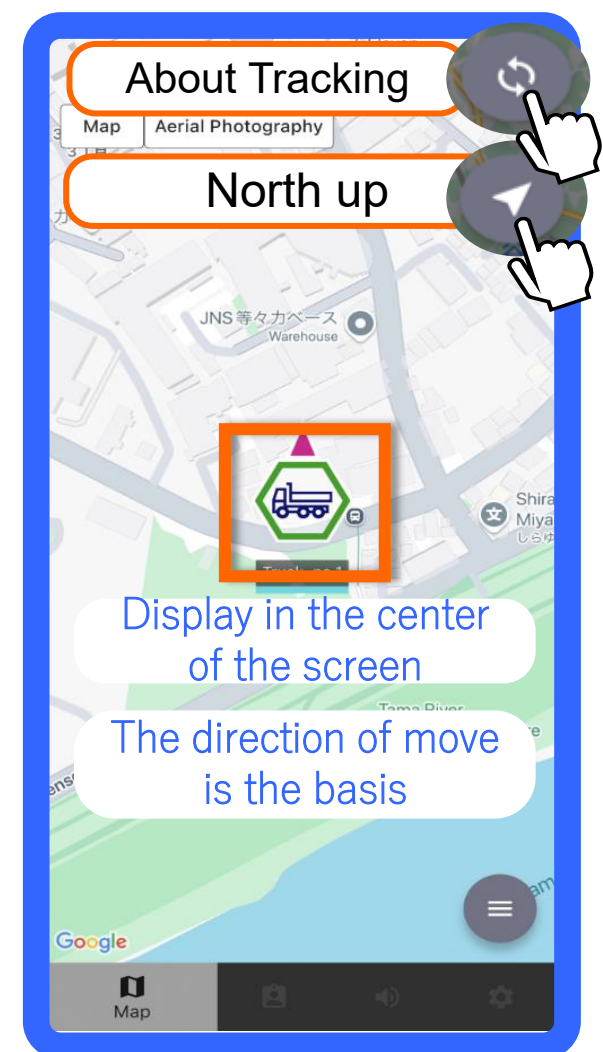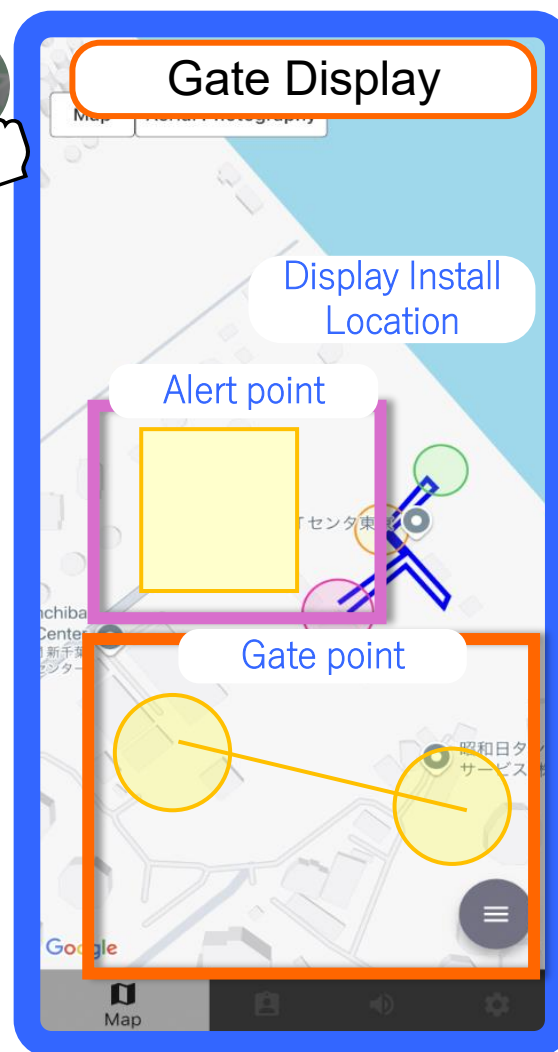
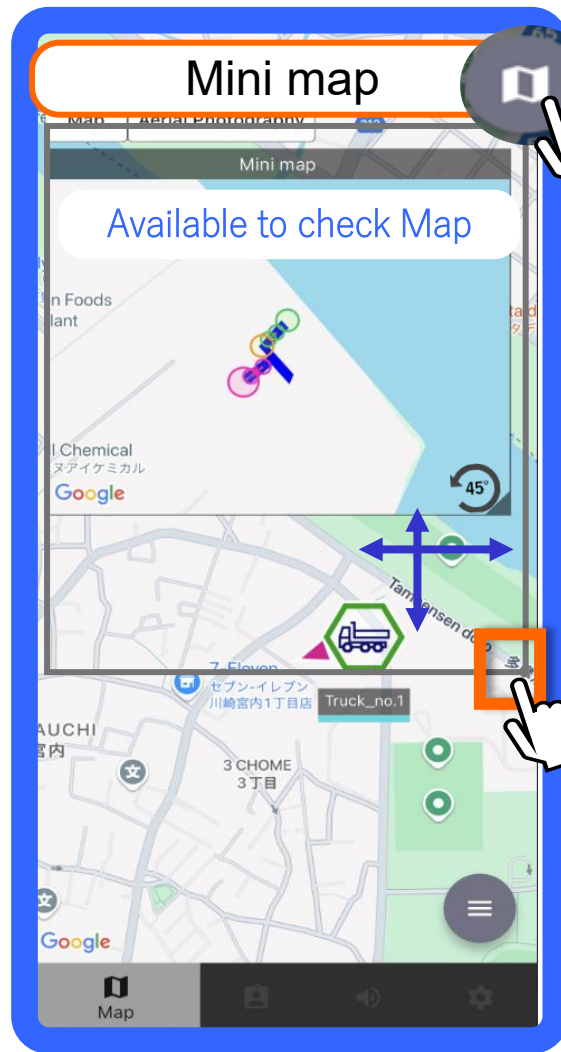
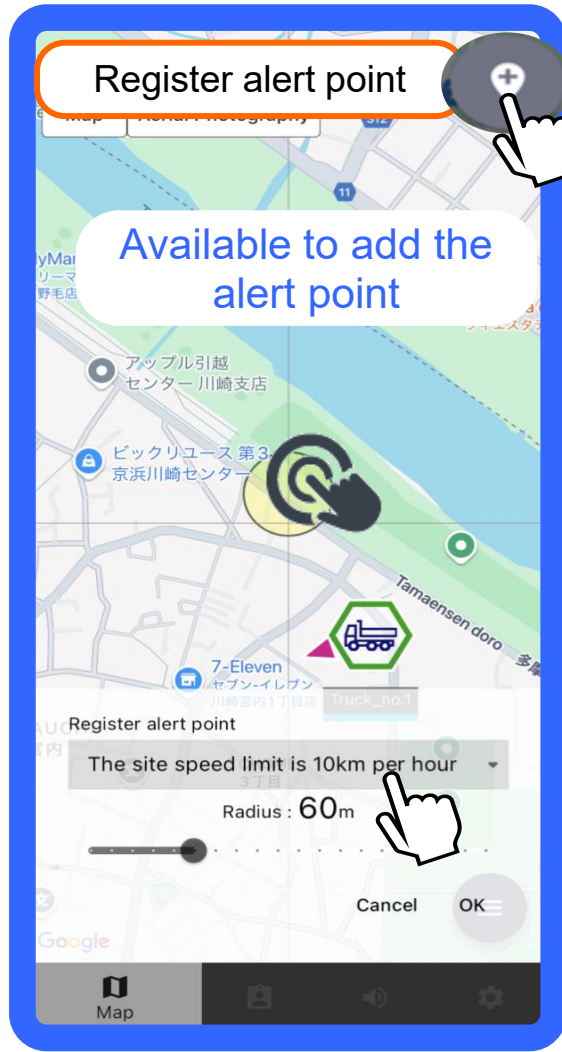


Smart Construction

Smart phone Apps

Smart Construction Fleet mobile

Standard mode

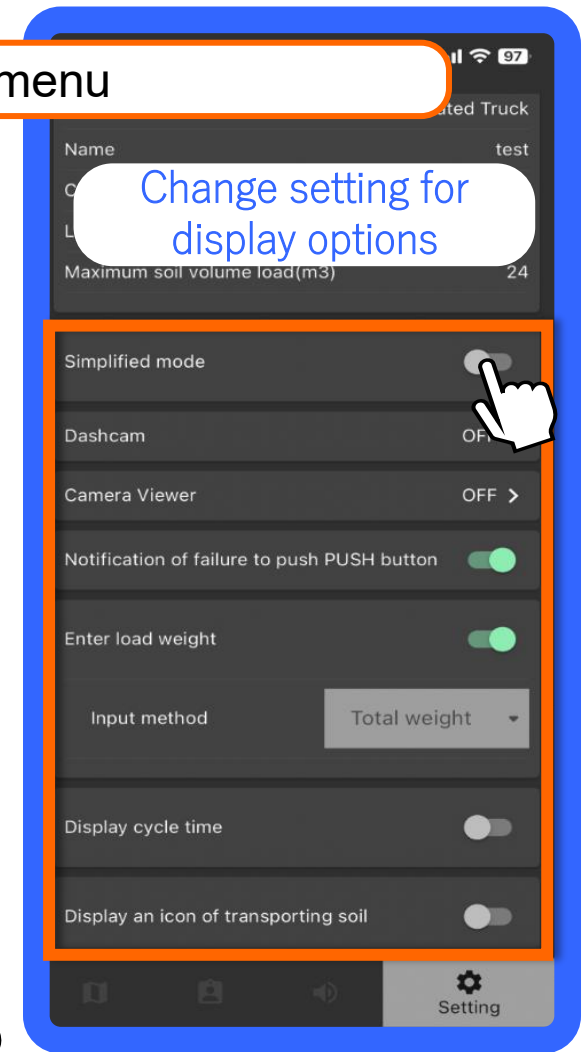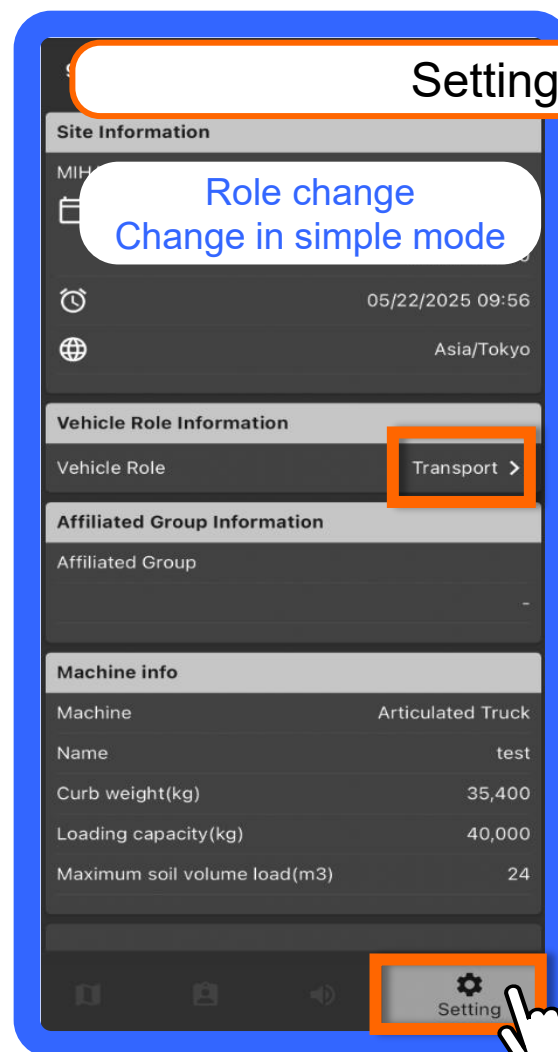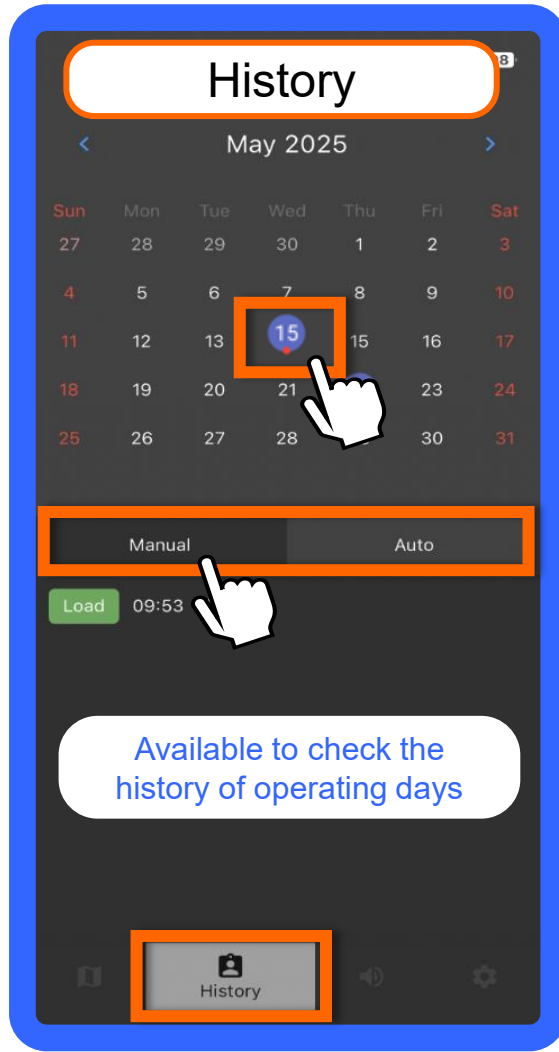

Smart Construction